

SEAT ARMREST


Step 1:

Locate the screw holes under the seat cover... on the side of the seat by feeling with your finger.




Step 2:

With a sharp pointing tool, carefully make two holes through the seat cover, carefully make two small crosswise cuts within the hole diameter.

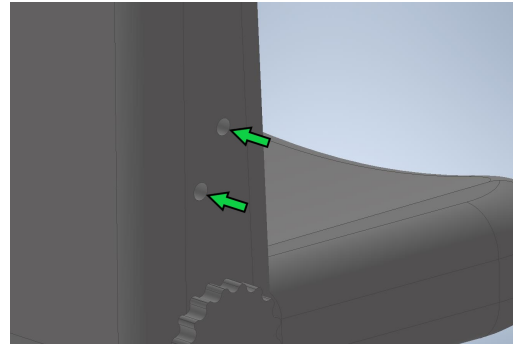


Step 3: To assemble the armrest(s) Determine which side is needed and follow instructions by inserting the screw first than sliding the anchor bracket into the armrest body side hole.

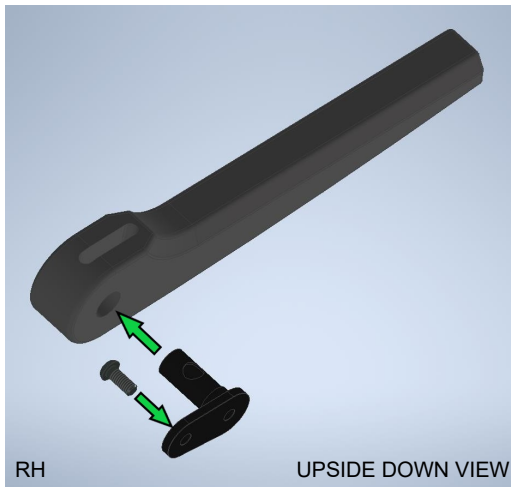

**Sitting Position
SEAT LEFT
ARMREST**




**Sitting Position
SEAT RIGHT
ARMREST**

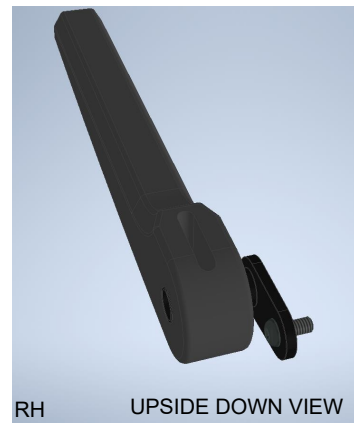


Step 4:


Insert bolt in the armrest side hole making sure it drops all the way through the bracket.

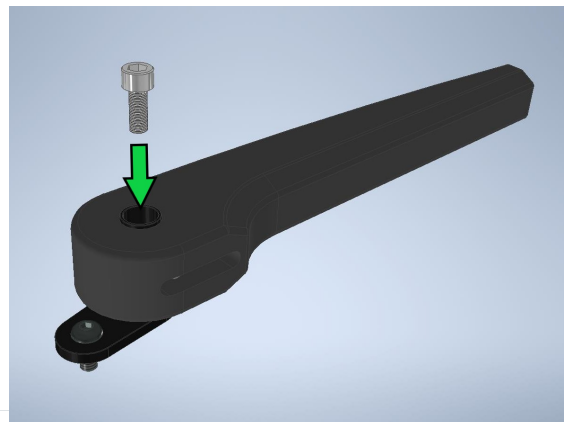


Step 5:
Insert and tighten both
screws.

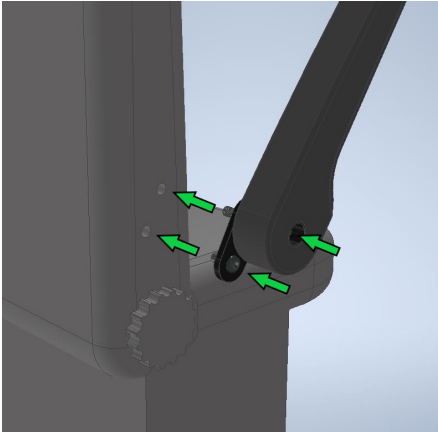

Step 6:
Insert locking screw
into the slot on the
armrest and tighten it.

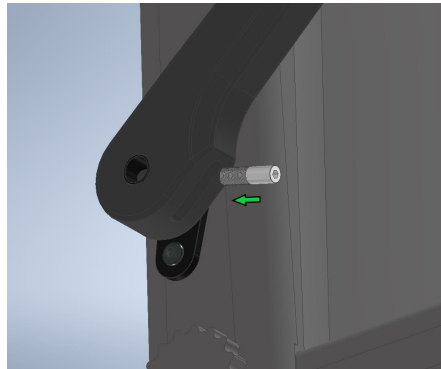

Step 7:
Insert plastic cap
covering the side hole
and press it.

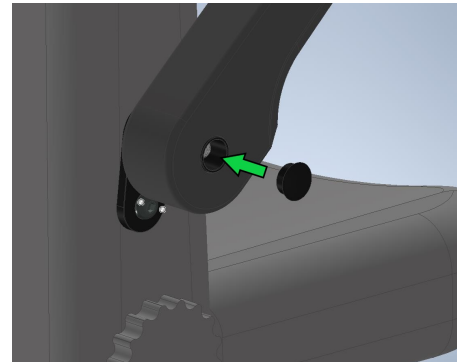

NOTE: We recommend using low to medium strength thread lock on the mounting screws/bolts.

North America

AMF-Bruns of America
1797 Georgetown Road
Hudson · OH 44236
Phone: 1 877-506-3770
EM: info@amfbrunsamerica.com
WEB: www.amfbrunsamerica.com

Germany / Europe

AMF-Bruns GmbH & Co. KG
HauptstraBe 101
D-26689 Apen
Phone: +49 44 89 72 71 01
EM: hubmatik@amf-bruns.de
WEB: www.amf-bruns.de

Asia

Smartfloor Seating (Thailand) Co.
Kunwang Place 165/86
T.: Sanprapao A.: Sansai
Chiang Mai 50210 Thailand
Phone: +66 81 381 5207
EM: info@samrtfloor.nl

Middle East & North Africa

AMF-Bruns MENA
Bisco FZCO · Silicon Oasis
LIU4 Units C8 & C9 · Dubai
Phone +971 4 3207123
EM: mena-office@amf-bruns.ae
WEB: www.amf-bruns.ae

South Africa

AMF-Bruns South Africa
Shoprider
92 Jakaranda Street
Unit # 13 Diamond Park
Hennopspark · CENTURION
Phone +27 12 653 1168
EM: info@amf-bruns.co.za
WEB: www.amf-bruns.co.za

United Kingdom

AMF-Bruns UK LTD
Unit 3, Parkway Four
Longbridge Road
Trafford Park
Manchester · M17 1SW
Phone: +44 161 872 7951
EM: hubmatik@amf-bruns.de
WEB: www.amf-bruns.com

Netherlands, Belgium and Luxembourg

SMARTFLOOR B.V.
Bedrijvenpark Twente 415
7602 KM Almelo
Phone: +31 546 45 55 65
EM: info@smartfloor.nl
WEB: www.smartfloor.nl

**The Global Leader In
Wheelchair Securement and
Occupant Restraints Since
1958.**



AMF-Bruns of America

www.amfbrunsamerica.com

877-506-3770 • 1797 Georgetown Rd • Hudson, OH 44236

